




How to change the position of the bike arm around the rack frame

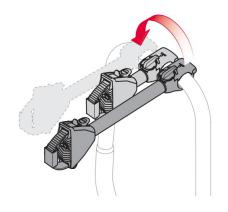

1

It is essential that you unlock and release the strap <u>before</u> moving the arm around the frame

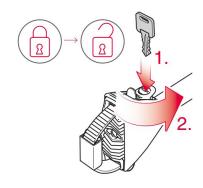

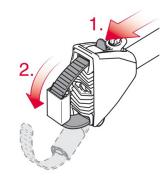



2

Once the strap is released you can move the dial to release the arm from the frame





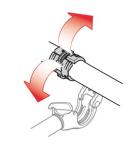

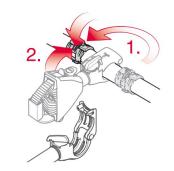

•

Once you have moved the arm to the new position, resecure it

