

1

# Kit 187054

**CITROËN Jumper**, 4-dr Van, 06-

**FIAT Ducato**, 4-dr Van, 06-


**OPEL Movano**, 4-dr Van, 22-

**PEUGEOT Boxer**, 4-dr Van, 06-

**RAM Promaster**, 4-dr Van, 14-

**TOYOTA Proace Max**, 4-dr Van, 24-

**VAUXHALL Movano**, 4-dr Van, 22-



+ 7 kg  
15,4 lbs = Max: 100 kg  
/ 220 lbs

+ 10,5 kg  
21,1 lbs = Max: 150 kg  
/ 330 lbs

Max 130 km/h  
80 Mph

80 km/h  
50 Mph

ISO 11154-E




5562356002

Bring your life  
thule.com






This kit is only for vehicles with fixpoint mounting.






**1**  
KIT



**Safety**

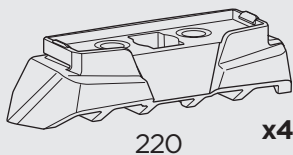



**i**

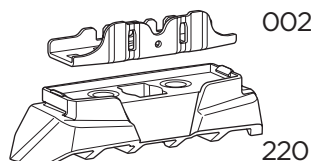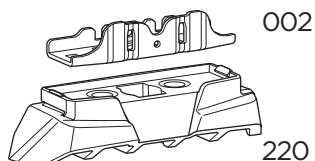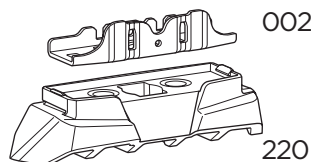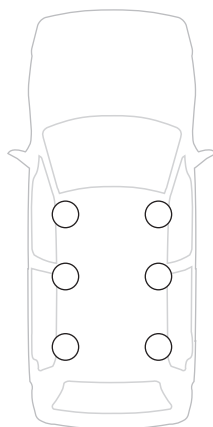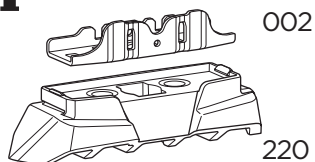


1

**A**

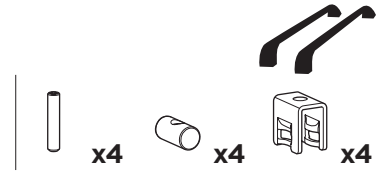


x4

**B**




x4

**C**

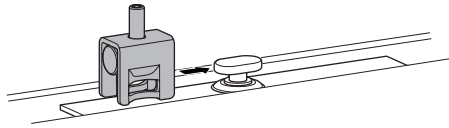


x4

**D**

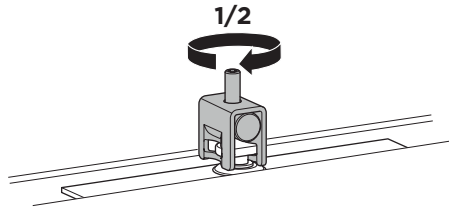


x4

**E**

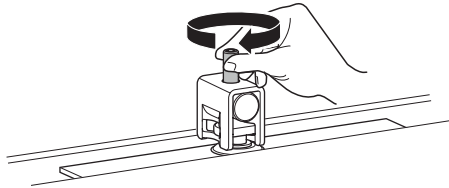




x4

2

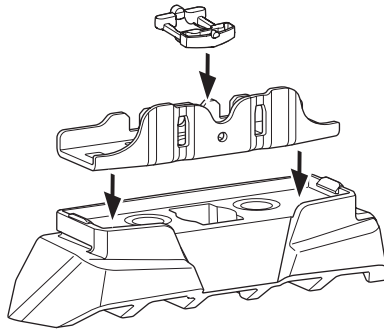

x4


3

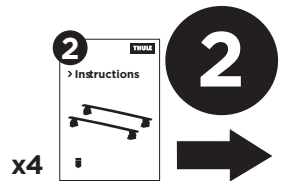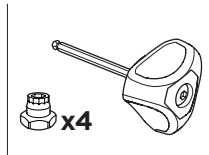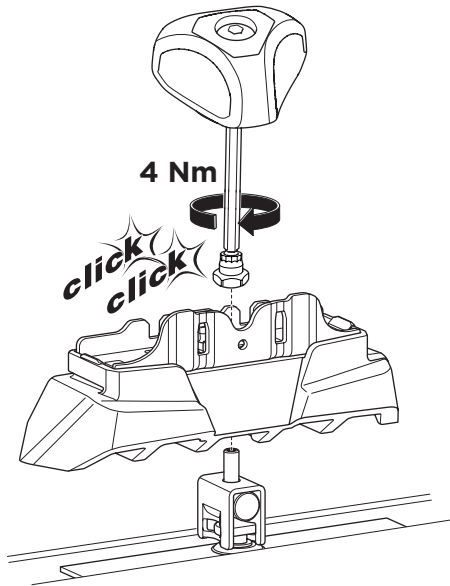







This kit is only for vehicles with fixpoint mounting.

**1**  
KIT










**Safety**

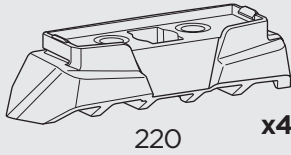



x2

**i**

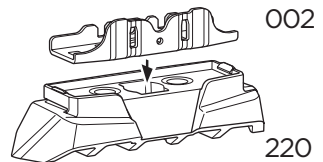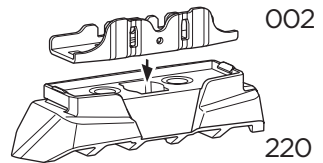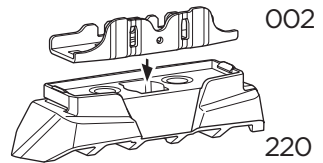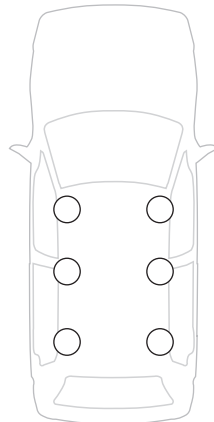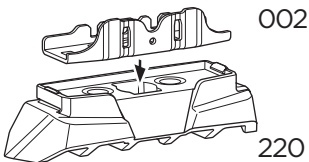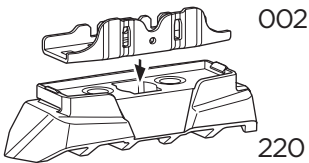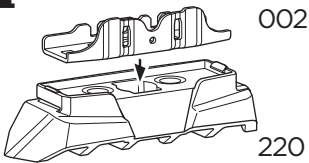


1

**A**

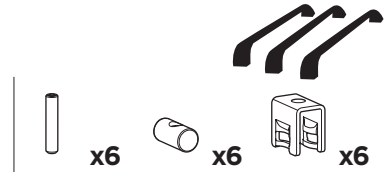


x6

**B**




x6

**C**

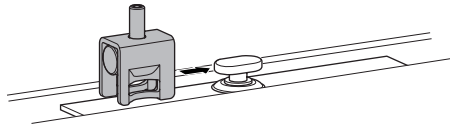


x6

**D**

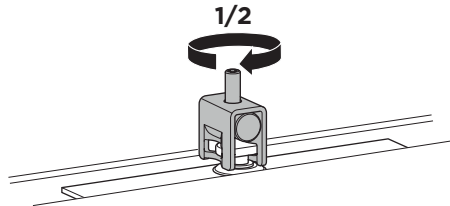


x6

**E**

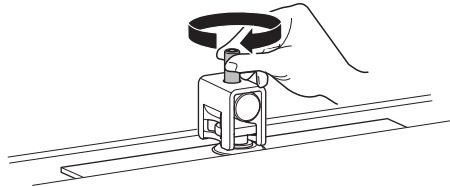



x6

2

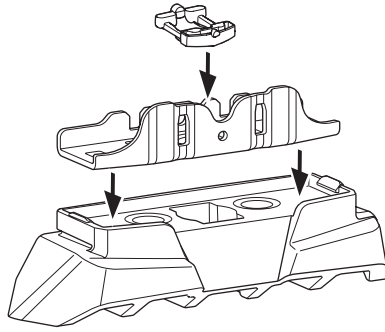


x6

3

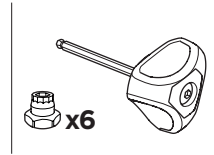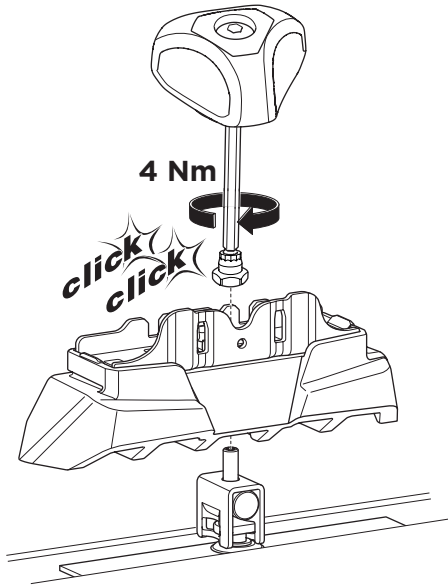


x6

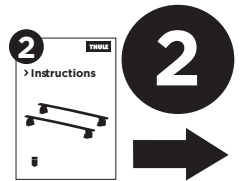


**i**



**A**

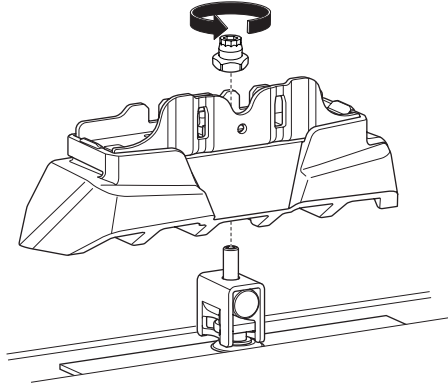

**B**

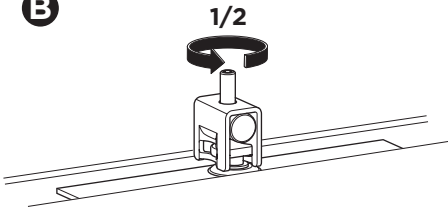

**C**

