

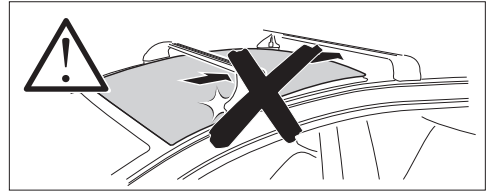
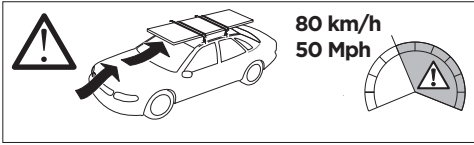


# 1

## Kit 187209 VOLKSWAGEN Multivan (T7), 5-dr MPV, 22-

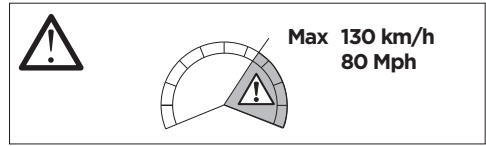

ISO 11154-E

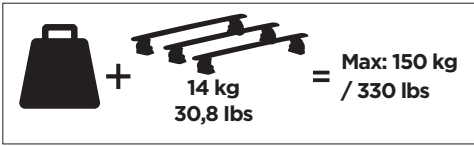

This kit is only for vehicles with fixpoint mounting.

**1**  
KIT

Safety

004 x2

195 x2

6 mm  
50229 x1

M8x55 mm  
50108 x4

**2**  
KIT

Safety

004 x2

195 x2

**Kit 187082**

6 mm  
50229 x1

M8x40 mm  
50603 x4

EXT.  
PAD

760 x2


**x2**

Bring your life  
thule.com



**i**




**Kit 187082**

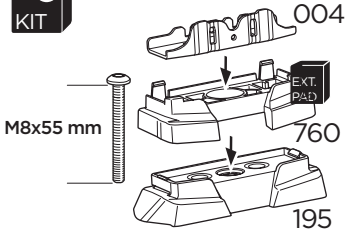

**Kit 187082**

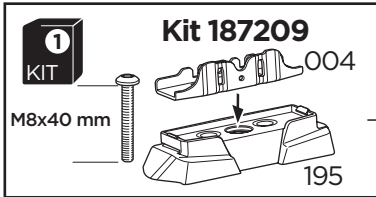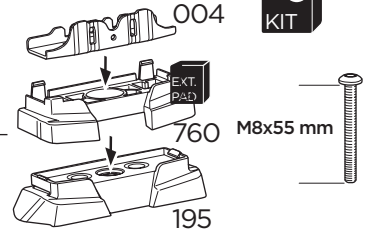


**Kit 18709**

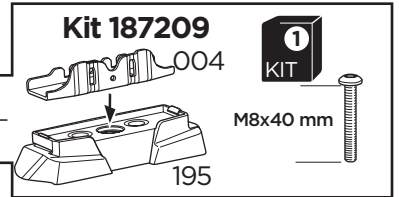


**Kit 18709**




**Kit 187082**

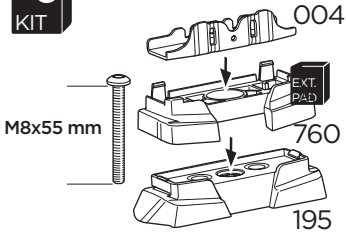


**Kit 187082**

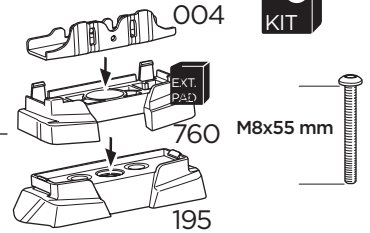


1 **A**

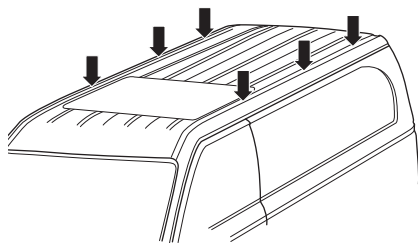


**B**

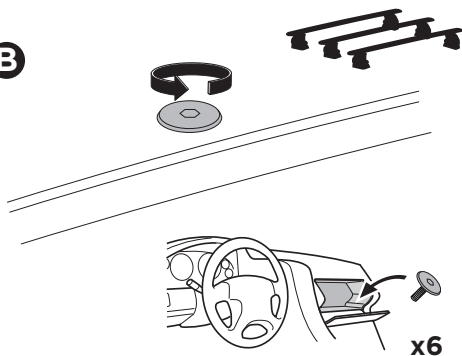


2





8 Nm

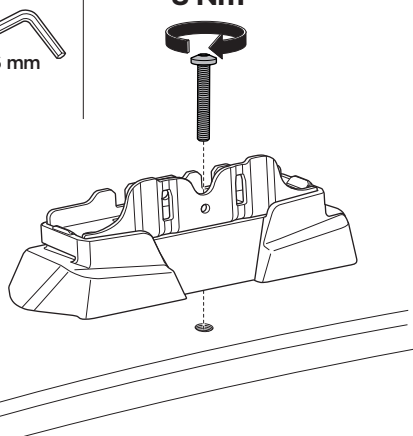

3

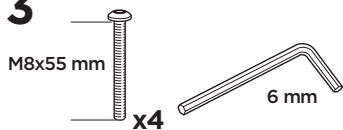


8 Nm

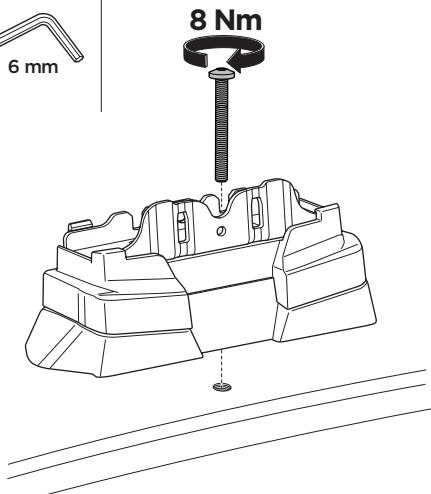

**i**



**A**

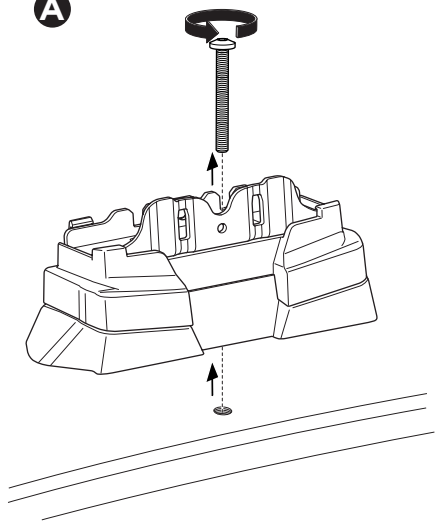

**B**

